
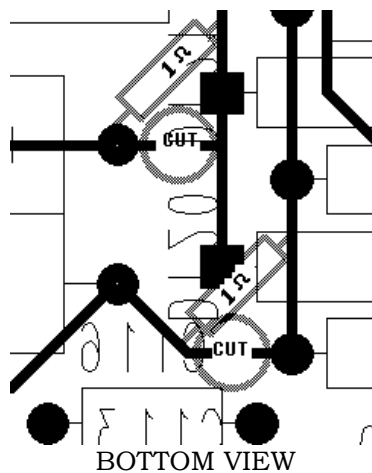


Control Power Board fixes

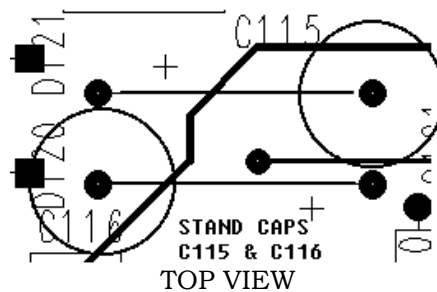

- Replace C115, C116 with 65uF 63V capacitor. Stand these caps on there **NEGATIVE** lead.
- Replace C125, C127 with 36V zener, 1N5365B (or 12V&24V in series 1N4742, 1N4749)
- Cut trace on bottom of PCB between D103 anode and neg lead of C116 as shown in sketch, and add a 1 ohm 1/2W resistor. Cut trace on bottom of PCB between D120, D121 cathodes and pos lead of C115 as shown in sketch, and add a 1 ohm 1/2W resistor. (R121, R122)